



Bluetooth Player Owner's Manual


Thank you for giving Home Theater Direct the chance to win your business! We are confident you will find that HTD offers an outstanding combination of performance and value in everything we make. To ensure you get the most out of your new equipment, please take a moment to read this manual before you get started. Should you lose this manual, you can always download or print a copy from www.htd.com.

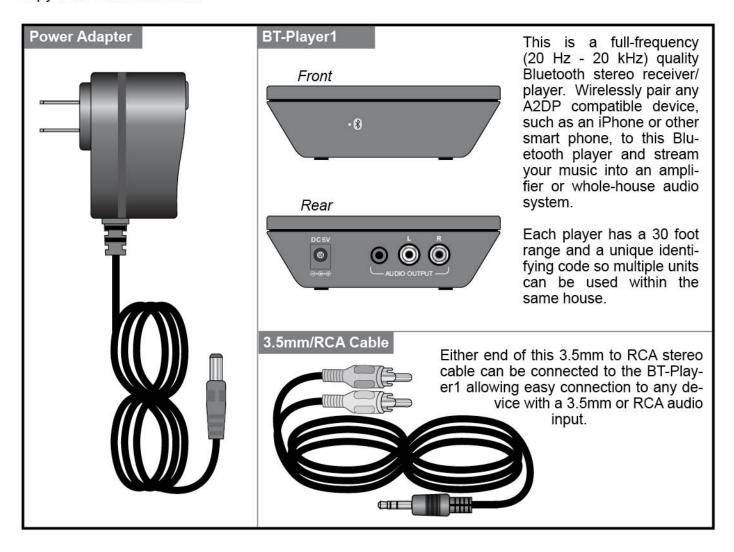

BT-Player1 Features

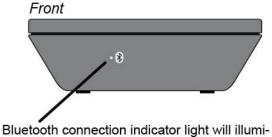

Bluetooth connection indicator light will illuminate blue when a bluetooth device is successfully connected

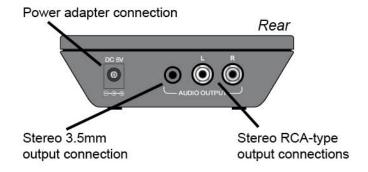

7.04.04.2012

Connecting and Using the BT-Player1

Basic Connection:

- •BT-Player1 was designed with flexibility in mind. It can be integrated into a complete whole-house audio system such as the HTD Lync system, connected to a stereo amplifier, or connected to a home theater receiver. These are the most common uses. See the diagrams below for more information about these uses.
- •The BT-Player1 must be paired with the smart device from which you are sending audio. BT-Player1 will appear as "Audio Adapter" with four numbers following it (ex: Audio Adapter 0279) within your bluetooth pairing list. This number is used for identification in the situation that you have more than one BT-Player1 connected to your system. For more information about bluetooth pairing with your smart device, please see your device's owner's manual.
- •It is important to keep in mind that the MAXIMUM distance from smart device to the BT-Player1 should be no more than 30 feet. The connection is best maintained by not moving the smart device during operation.

Diagram 1

Diagram 2



Diagram 1 shows a smartphone paired with the BT-Player1. The BT-Player1 is connected to a stereo amplifier (or home theater receiver, or any whole house audio controller) that accepts external audio inputs.

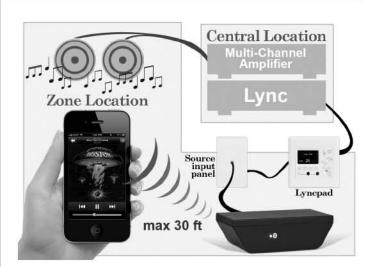


Diagram 2 shows a smartphone located within a zone paired with the BT-Player1 which is located in or near the same zone. The BT-Player1 is connected to an HTD Lync Whole-house Audio Controller via a Source Input Panel connected to a Lyncpad.

IMPORTANT: Some devices will ask you to enter a PIN code to connect to this device. Enter the PIN code below:



Warranty

All HTD electronics carry a two-year parts and labor warranty. Warranty registration occurred automatically at the time your order was placed. There is no need to complete or mail in additional paperwork.

If you have any questions, we can be reached at... info@htd.com or toll free 1-866-HTD-AUDIO (483-2834)

